

# Indicators / Warning Lamps

---

---

## Turn Signal Indicator

Flashes when the turn signal is ON.

## High Beam Pilot Lamp

Lights if the high beam is selected.

## Neutral Indicator

Lights if the engine is in neutral gear and the main switch key is at ON position.

