

TYRES

Proper air pressure will provide maximum stability, riding comfort and tyre life.

Check tyre pressure frequently and adjust if necessary.

NOTE:

- * Tyre pressure should be checked before you ride while the tyres are “cold”.
- * (UY type)

This motorcycle is fitted with TUFFUP tubes in both the front and rear wheels. Compared with ordinary tyre tubes, the TUFFUP tube releases little air when punctured by a nail or other similar object. For this reason, even though they remain fully inflated, it is important to regularly check the tyres for embedded objects. When replacing a TUFFUP tube, be sure to select the size appropriate for the tyre. Because of the special construction of the TUFFUP tube, it should always be repaired or replaced by your Honda dealer.

On/off-road tyres are standard on this model. Select the right replacement tyres in accordance with the following specifications. Check the tyres for cuts, embedded nails, or other sharp objects. See your Honda dealer for replacement of damaged tyres or punctured inner tubes.

	Front	Rear
Tyre size	2.75 – 17 41P	2.75 – 17 41P
Cold tyre pressures kPa (kgf/cm ² , psi)	175 (1.75 , 25)	225 (2.25 , 33)