


AIR CLEANER

(Refer to the maintenance precautions on page 45).

The air cleaner should be serviced at regular intervals (page 39). Service more frequently when riding in unusually wet or dusty areas.


1. Remove the wing nut(1), washer and air cleaner tube clamp screw(2), then remove the air cleaner tube and air cleaner housing cover.

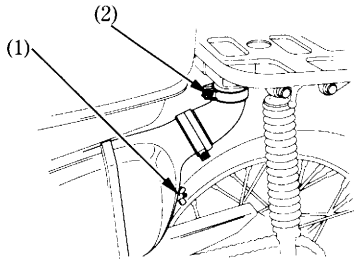

(1) Wing nut

(2) Screws

2. Unscrew the mounting plate bolt(3) and remove the mounting plate(4).
3. Pull out the air cleaner(5).
4. Wash the air cleaner in clean, nonflammable or high flash point solvent and let it dry thoroughly.

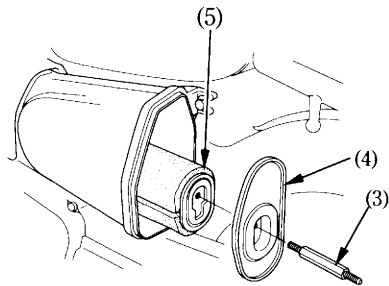

(3) Bolt

(4) Mounting plate

(5) Air cleaner