

**▲WARNING**

**\* Never use petrol or low flash point solvents for cleaning the air cleaner. A fire or explosion could result.**

5. Soak the air cleaner in gear oil (SAE 80—90) until saturated, then squeeze out the excess oil.
6. Install the removed parts in the reverse order of removal.