


## WHEEL REMOVAL

### Front Wheel Removal


(Refer to the maintenance precautions on page 45 ).

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Remove the speedometer cable (1).
3. Remove the front brake adjusting nut (2) and remove the front brake cable (3) from the brake arm.

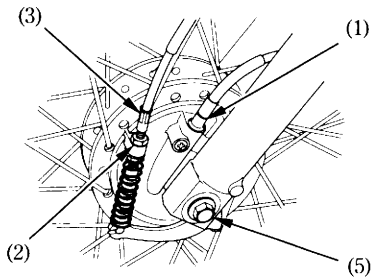

- (1) Speedometer cable    (3) Front brake cable  
(2) Brake adjusting nut    (5) Axle

4. Remove the cotter pin (UB,NZtype) and axle nut (4).
5. Remove the axle (5) and the wheel.

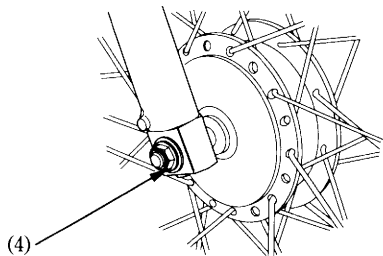

- (4) Front axle nut