

Rear Wheel Removal

(Refer to the maintenance precautions on page 45).

1. (UY type)


Place the motorcycle on its center stand.

(UB,NZ type)

Raise the rear wheel off the ground by placing a support block under the engine.

2. Remove the rear brake adjusting nut (1).

Disconnect the brake rod (2) from the brake arm (3).

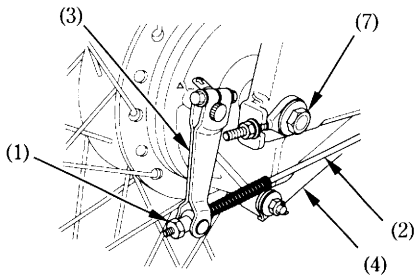

(1) Adjusting nut

(2) Brake rod

(3) Brake arm

(4) Stopper arm

(7) Axle


3. Disconnect the brake stopper arm (4) from the brake panel by removing the cotter pin, stopper arm nut, washer and rubber grommet.

4. Loosen the drive chain adjusting nuts (5).

5. Remove the cotter pin (UB,NZ type) and axle nut (6) and pull out the rear axle (7).

Push the wheel forward and remove the drive chain from the rear sprocket.

6. Pull out the wheel from the swingarm.

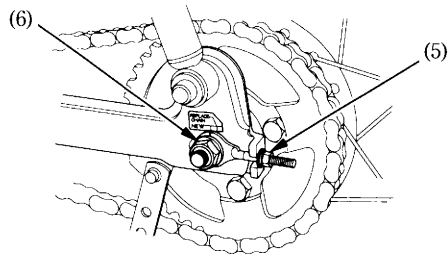

(5) Adjusting nuts

(6) Axle nut