

### Installation Notes:

- Reverse the removal procedure.
- Tighten the rear axle nut and brake stopper arm nut to specified torque.  
Rear axle nut torque:  
88 N·m (9.0 kgf·m , 65 lbf·ft)  
Brake stopper arm nut torque:  
14 N·m (1.4 kgf·m , 10 lbf·ft)
- Adjust the brake (page 19 – 20 ) and drive chain (page 69 ).
- After installing the wheel, apply the brake several times and check for free wheel rotation when released.

Used cotter pin may not effectively secure fastener. Always replace used cotter pin with new one.

If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.