

Fuel Tank

The fuel tank is located under the seat. Lift up the seat, then remove the fuel cap (1) by turning it counterclockwise. Fuel tank capacity is:

5.5 l (1.45 US gal, 1.21 Imp gal)


Install the fuel tank cap by turning it clockwise. Use low-lead or unleaded petrol with an Octane number of 91 or higher. If this is not available, leaded regular petrol can be used.

FOR AUSTRALIA ONLY:

Use unleaded fuel with a research octane number of 91 or higher.

CAUTION:

* If “spark knock” or “pinking” occurs at a steady engine speed under normal load, change brands of petrol. If spark knock or pinking persists, consult your authorized Honda dealer. Failure to do so is considered misuse, and damage caused by misuse is not covered by Honda’s Limited warranty.

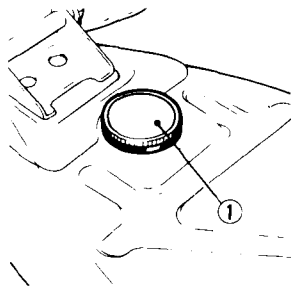

(1) Fuel cap