


SIDE STAND

(Refer to the maintenance precautions on page 39).

(SA, D, UY, UB) Check the rubber pad for deterioration and wear. Replace if wear extends to the wear line (See (1) in the picture). Check the side stand assembly for freedom of movement. If parts must be replaced, please contact an authorized HONDA dealer.

(SA, D, UY, UB)

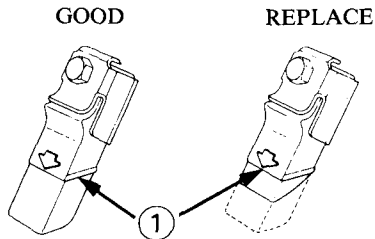


(1) Wear line

(NZ) Check the side stand spring for damage and loss of tension, and the side stand assembly for freedom of movement.

If the side stand (1) is squeaky or stiff, clean the pivot area and lubricate the pivot bolt with engine oil.

(NZ)

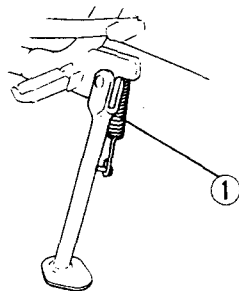

(1) Side stand