

Installation Note:

- Reverse the removal procedure.
- Tighten the axle nut to specified torque.
Axle nut torque:
43 N·m (4.3 kg-m, 31 lb-ft)
- Adjust the brake (page 13) and drive chain (page 58).
- After installing the wheel, apply the brakes several times, and check for free wheel rotation when released.

⚠ WARNING

- * **If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.**

CAUTION:

- * **Always replace used cotter pins with new ones.**