

Instruments *(Continued)*

Average speed

Shows average speed since the engine was started.

Display range: 0 to 210 km/h (0 to 130 mph)

- Initial display: “---” is displayed

When “---” is displayed while riding, go to your dealer for service.



Trip time

Shows operating time since the engine was started.

Display range: 00:00 to 99:59 (hours:minutes)

- Above 99:59: back to 00:00



Audio information

Shows the artist name and title of the currently played track.

When the audio system is off, the audio information display is blank.

- ▶ **To play the audio system:**  P.44