

## Odometer

Total distance ridden. When “-----” is displayed, go to your dealer for service.



## Tripmeter A/B

Distance ridden since the tripmeter was reset. When “---.-” or “----.-” is displayed, go to your dealer for service.



► **To reset the tripmeter:** **P.27**

## Air temperature gauge

Shows ambient temperature.

Display range: –10 to 50°C

- 3°C or less: “LOW AMBIENT TEMPERATURE” is displayed
- Below –10°C: “---” is displayed
- Above 50°C: 50°C flashes



The temperature readout may be incorrect at low speeds due to reflected heat.

## LOW AMBIENT TEMPERATURE display

Displayed when ambient temperature drops to 3°C.

To return to the ordinary display, the **SET** or **SELECT** button needs to be pressed or ambient temperature needs to rise to 5°C.

