


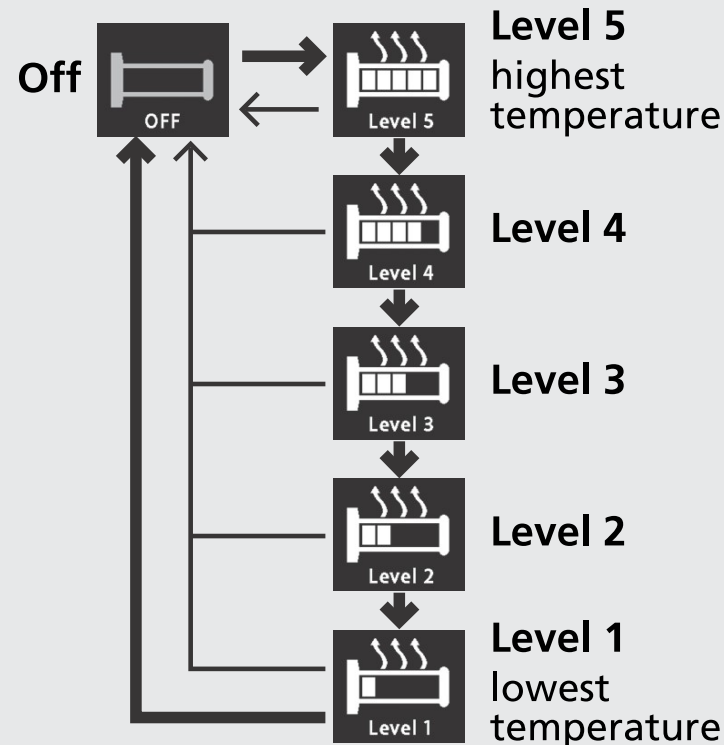
To operate handle grip heater

- 1 Start the engine.  P.61
- 2 Press the handle grip heater switch. The handle grip heater is on.
- 3 Select the heater level by pressing the switch.
 - ▶ Do not leave the handle grip heater in the high position for a long time on a warm day.
- 4 To turn off, press the switch until "OFF" is displayed. Also to turn off, press and hold the switch.

Do not use the handle grip heater with the engine at idle for a long time. It may result in a low (or dead) battery.

Maintains the selected level when the ignition switch is turned off.

- ▶ The heater level is not changed if the ignition switch is turned to the OFF position within 5 seconds after heater level change.



→ Press the handle grip heater switch

→ Press and hold the handle grip heater switch