

Audio System *(Continued)*

■ To pair a *Bluetooth*[®] sound device

➔ P. 52

■ To stop the track

Press the **AUDIO** power button. The audio system turns off and the track stops.

■ To change a track on the USB flash drive

Press the **TRACK** \triangle (up) button to skip to the next track.

Press the **TRACK** ∇ (down) button to go back to the beginning of the current or previous track.

■ To change a folder on the USB flash drive

Press and hold the **TRACK** \triangle (up) button to change to the next folder on the USB flash drive.

Press and hold the **TRACK** ∇ (down) button to change to the previous folder on the USB flash drive.

Files on the USB flash drive are played in alphabetical order of file names. This order may be different from the order displayed on your PC or device.