

Audio System *(Continued)*

Speed-sensitive Volume Compensation (SVC)

The SVC has four volume modes: OFF, LO, MID, and HI. SVC adjusts the volume level based on the vehicle speed. The faster you go, the audio volume increases. As you slow down, the audio volume decreases. If you feel the sound is too loud, choose LO, and vice versa.

To change the volume mode

- 1 Press and hold the **MUTE** button for 1 second.
- 2 Release the button. The display will show "AUTO VOLUME LO", "MID" (initial setting), "HI" or "OFF" (deactivate).
- 3 Repeat steps **1** & **2** until the desired mode is displayed.



AUTO VOLUME
MID