


## Left Inner Panel

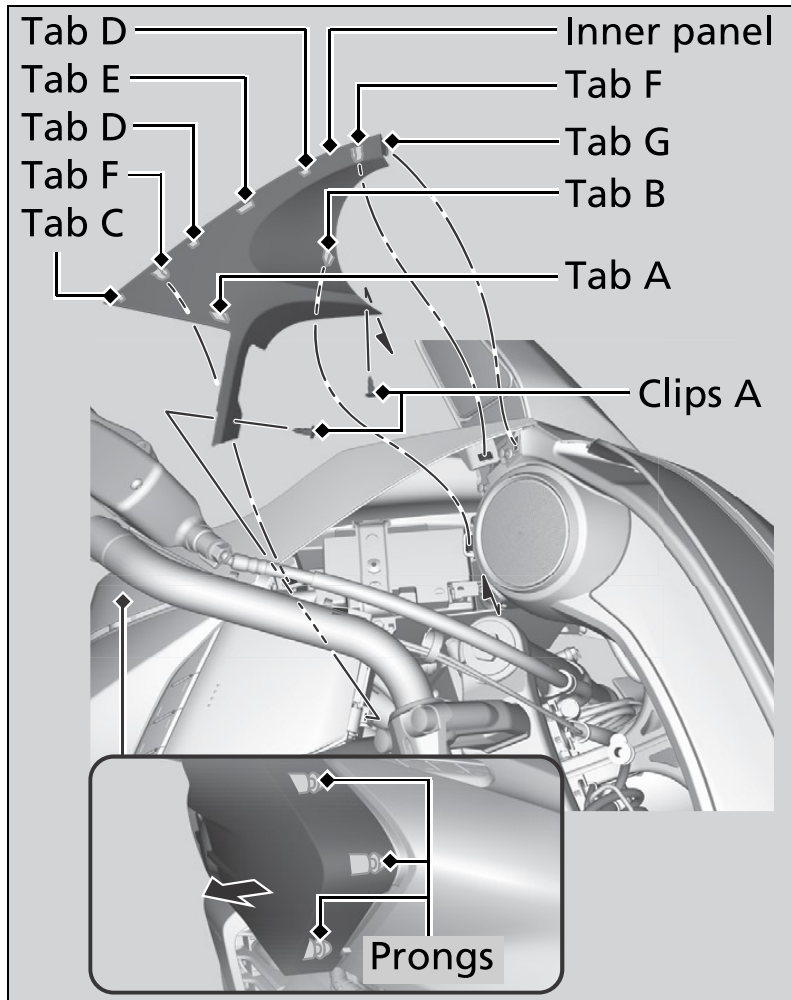

The left inner panel must be removed to access the battery, fuse box and main fuses A, B, to remove the left fairing pocket and left middle cowl.

When removing and installing the left inner panel, be careful not to damage the tabs.

### Removal

1. Remove the clips A. ► P. 94
2. Release tab A and B from the fairing pocket and speaker.
3. Release the prongs from the grommets.
4. Remove the left inner panel by releasing tabs C, D, E, F and G.

### Installation

Install the parts in the reverse order of removal.