

Troubleshooting

Engine Will Not Start (HISS indicator stays on)	P. 115
Overheating (High coolant temperature indicator is on).....	P. 116
Warning Indicators On or Flashing	P. 117
Low Oil Pressure Indicator.....	P. 117
PGM-FI (Programmed Fuel Injection)	
Malfunction Indicator Lamp (MIL)	P. 117
ABS (Anti-lock Brake System) Indicator	P. 118
TCS (Traction Control System) Indicator ...	P. 119
Other Warning Indications	P. 120
Fuel Gauge Failure Indications.....	P. 120
Coolant Temperature Gauge Failure	
Indication	P. 120
Handle Grip Heater Failure Indication	P. 121
Tyre Puncture	P. 122
Audio System Trouble	P. 131
Electrical Trouble	P. 138
Battery Goes Dead	P. 138
Burned-out Light Bulb.....	P. 138
Blown Fuse	P. 141