

## Tyre Puncture ► Removing Wheels

5. Loosen the right front axle pinch bolts.
6. Remove the front axle bolt.
7. Support your motorcycle securely and raise the front wheel off the ground using a maintenance stand or a hoist.
8. Loosen the left front axle pinch bolts.
9. On the left side, withdraw the front axle shaft, and remove the side collars and wheel.

