


■ Main Fuse B

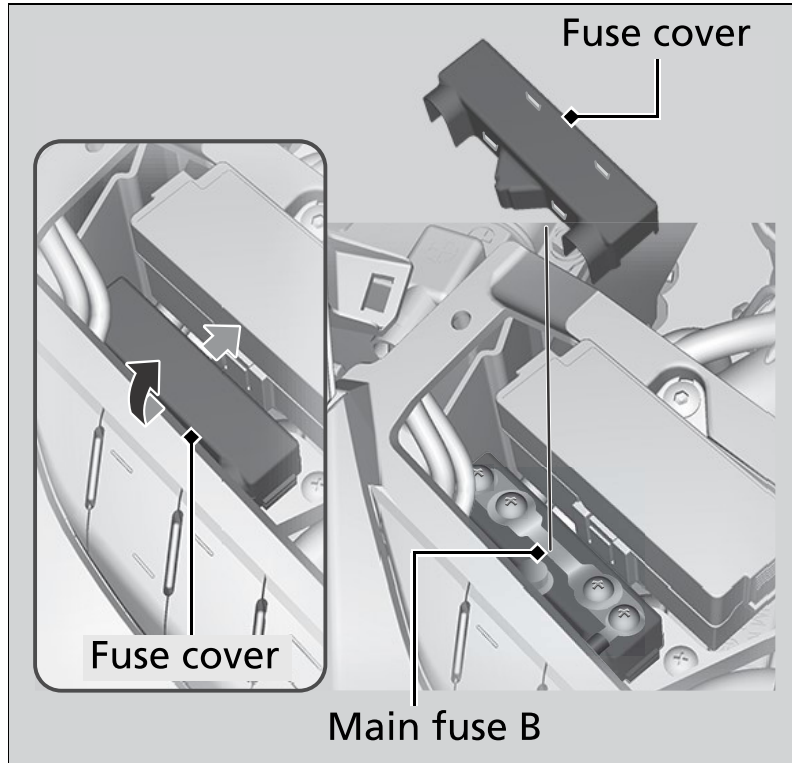

1. Remove the left inner panel. ➤ P. 87
2. Remove the left fairing pocket. ➤ P. 91
3. Remove the fuse cover.
4. Check for a blown fuse. If main fuse B is blown, see your dealer for this service.
5. Reinstall the fuse cover.
6. Install the parts in the reverse order of removal.