

## Fuel Tank

The fuel tank capacity including the reserve supply is:

8.5 ℓ (2.25 US gal , 1.87 Imp gal)

The reserve supply alone is:

1.8 ℓ (0.48 US gal , 0.40 Imp gal)

To open the fuel fill cap (1), pull out the breather tube (2) from the steering stem nut. Then turn the fuel fill cap counterclockwise.


Do not overfill the tank. There should be no fuel in the filler neck (3).

After refueling, to close the fuel fill cap, align the latch in the cap with the slot in the filler neck. Push the fuel fill cap into the filler neck until it snaps closed and locks. Remove the key.

## ⚠ WARNING

Petrol is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine and keep heat, sparks, and flame away.
- Refuel only outdoors.
- Wipe up spills immediately.

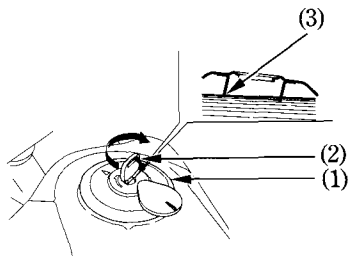

- (1) Fuel fill cap  
(3) Filler neck

- (2) Ignition key