


SIDE STAND

Refer to the Safety Precautions on page 53 .


Check both the side stand spring (1) for damage and loss of tension, and the side stand assembly for freedom of movement.

If the side stand is squeaky or stiff, clean the pivot area and lubricate the pivot bolt with clean engine oil.

Left side

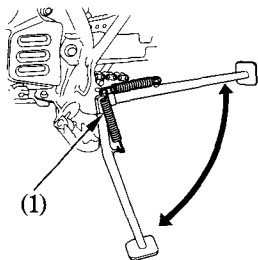

Right side

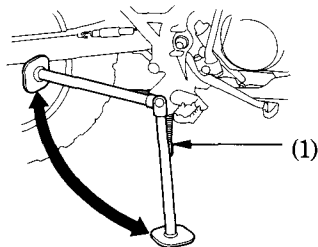

(1) Side stand spring