

2 To set the clock:


- 1 After backlight brightness adjustment, the hour digits start flashing.
- 2 Press the B button until the desired hour and AM/PM are displayed.
 - ▶ Press and hold to advance the hour fast.



- 3 Press the A button. The minute digits start flashing.



- 4 Press the B button until the desired minute is displayed.
 - ▶ Press and hold to advance the minute fast.

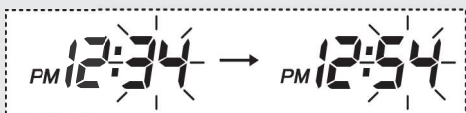

5 Except E type

Press the A button. The clock is set, and then the display returns to the backlight brightness adjustment.

E type only

Press the A button. The clock is set, and then the display moves to the changing of the speed and mileage unit.

3 E type only Changing the speed and mileage unit:

- 1 After clock setting, the speed and mileage unit start flashing.
- 2 Press the B button to select either "km/h" and "km" or "mph" and "mile".
- 3 Press the A button. The speed and mileage unit is set, and then the display returns to the backlight brightness adjustment.

