

Rear Wheel

Removal

1. Support your motorcycle securely and raise the rear wheel off the ground using a maintenance stand or a hoist.
2. **CTX700D only**
Release the parking brake.
3. **CTX700D only**
Remove the mounting bolts and remove the parking brake caliper.

CTX700D only

