

Ref. No.	Description	Function
1	Tripmeter	Shows mileage per trip.
2	Speedometer	Shows driving speed.
3	Odometer	Shows accumulated mileage.
4	Left turn signal indicator (amber)	Flashes when left turn signal operates.
5	High beam indicator (blue)	Lights when headlight is on high beam.
6	Oil pressure warning light (red)	<p>Lights when engine oil pressure is below normal operating range. Should light when ignition switch is "on" and engine is not running. Should go out when engine starts, except for occasional flickering at or near idling speed when the engine is warm.</p> <p><b>CAUTION</b></p> <p>* <i>Running the engine with insufficient oil pressure will cause serious engine damage.</i></p>