


WARNING

- * *The helmet holder is designed for use while parking. Do not operate the motorcycle with a helmet attached to the holder. The helmet may interfere with the rear wheel, possibly stopping the wheel.*

Seat Removal

The seat is secured by a latch (1) at either side of the seat, at the rear. Pull both latches to remove the seat. When replacing the seat, push down firmly. Lift the seat to make sure the latches are secure. The ring (2) can be used to lock the seat to the helmet holder.

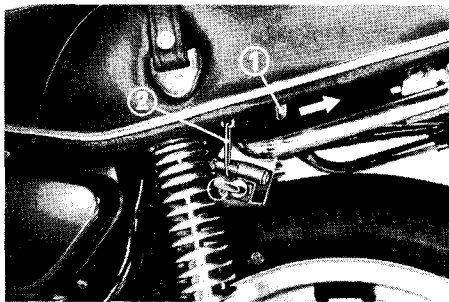

- (1) Seat latch
- (2) Ring