

perature. Add coolant to the reserve tank as required, to bring coolant level to the FULL mark (2), by removing the holding clip (5).

If the reserve tank is empty, or if coolant loss is excessive, check for leaks and see your authorized Honda dealer for repair. Do not remove the radiator cap.

WARNING

** Never remove the radiator cap when the engine is hot. The coolant is under pressure and severe scalding could result.*