

CAUTION

- * *The oil pressure warning light should go off a few seconds after the engine starts. If the light stays on, stop the engine immediately and check engine oil level. Do not operate the engine with insufficient oil pressure.*
6. After the engine starts, allow it to run at 1,000–2,500 rpm (fast idle), then open the choke gradually until the engine responds to the throttle when the choke is fully open (B).

Flooded Engine

If the engine fails to start after repeated attempts, it may be flooded with excess fuel. To clear a flooded engine, turn the engine stop switch “OFF” and push the choke knob in to the fully open position (B). Open the throttle fully and crank the engine for 5 seconds. Turn the engine stop switch “ON” and follow the Cold Engine Starting procedures, without using the choke.

Warm Engine Starting

When the engine is warm, follow normal Cold Engine Starting, but open the throttle slightly and do not use the choke.