

## Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Remove the speedometer cable set screw (1) and disconnect the speedometer cable (2).
3. Pull out the cotter pin (3) and remove the axle nut (4).
4. Remove the front axle holder nuts (5) and the front axle holder (6).
5. Remove the axle (7). Remove the wheel.

### NOTE


- \* Do not depress the brake lever when the wheel is off the motorcycle. The caliper piston will be forced out of the cylinder with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your authorized Honda dealer.

### Installation Notes:

1. Reverse the removal procedure.

### CAUTION

- \* *When installing the wheel, fit the brake disc carefully between the brake pads to avoid damaging the pads.*
2. Insert the axle through the wheel hub and the left fork leg. When tightening the axle nut, keep the handlebar and the wheel ahead to remove the load from the front fork, and carefully set the speedometer gear box so that there is no stress on the speedometer cable.

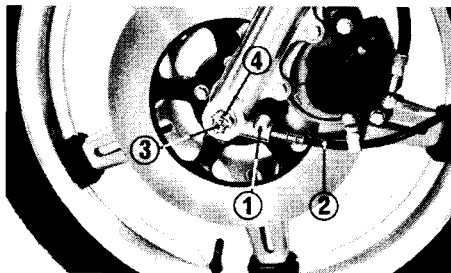

- (1) Set screw                      (3) Cotter pin  
(2) Speedometer cable        (4) Axle nut