


Air Cleaner Maintenance


The air cleaner should be serviced at regular intervals (page 44). When riding in dusty areas, more frequent service may be necessary.

1. Remove the seat.
2. Turn the air cleaner cover (1) counter-clockwise and remove it.
3. Take the air cleaner element out.

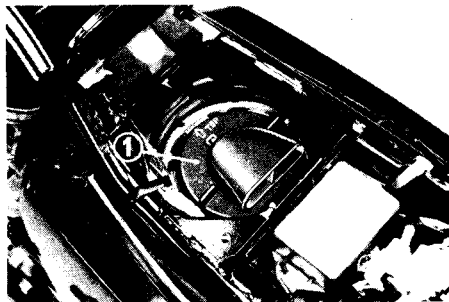

(1) Air cleaner cover

4. Clean the air cleaner element using compressed air from outside, or replace it if necessary.
5. Reinstall the above parts in reverse order of removal.

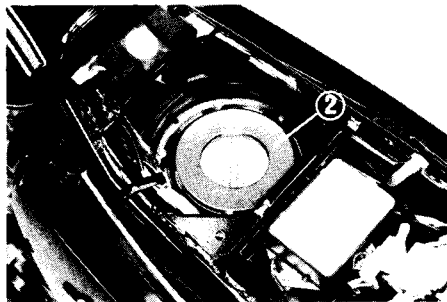

(2) Air cleaner element