


### **Crankcase Breather (for U.S.A. model only)**

1. Remove the two drain plugs from the tubes, and drain deposits and water.
2. Reinstall two drain plugs.

#### **NOTE**

- \* Service more frequently when often driven in rainy conditions, at wide open throttle or after the vehicle is washed or overturned. Service if deposit level can be seen in the transparent section of drain tubes.

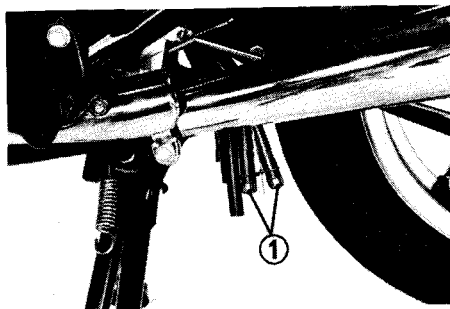

(1) Drain plugs