

## Front Brake

This model has a hydraulic disc front brake. As the brake pads wear, brake fluid level drops, automatically compensating for wear.

There are no adjustments to perform, but fluid level and pad wear must be inspected periodically. The system must be inspected frequently to ensure there are no fluid leaks.

In the control lever free travel becomes excessive and the friction pads are not worn beyond the recommended limit (page 54), there is probably air in the brake system and it must be bled. See your authorized Honda dealer.

### Brake fluid level:

#### **WARNING**


- \* *Brake fluid may cause irritation. Avoid contact with skin or eyes.*

Remove the reservoir cap, washer and diaphragm. Whenever the level is lower

than the level mark (1) engraved inside the reservoir, fill the reservoir with DOT 3 BRAKE FLUID from a sealed container, up to the level mark. Reinstall the diaphragm and washer, and tighten the reservoir cap securely.

#### **CAUTION**

- \* *Use only DOT 3 brake fluid from a sealed container.*
- \* *Handle brake fluid with care because it can damage paint and instrument lenses.*
- \* *Never allow contaminants (dirt, water, etc.) to enter the brake fluid reservoir.*

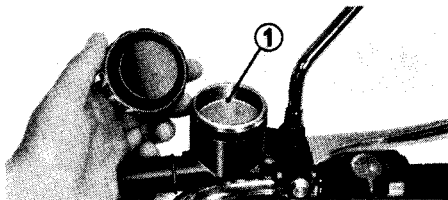

(1) Level mark