

# MAINTENANCE

page

<b>84</b>	<b>MAINTENANCE</b>
84	THE IMPORTANCE OF MAINTENANCE
85	MAINTENANCE SAFETY
86	SAFETY PRECAUTIONS
87	MAINTENANCE SCHEDULE
90	TOOL KIT
91	SERIAL NUMBERS
92	COLOUR LABEL
93	AIR CLEANER
96	CRANKCASE BREATHER
97	ENGINE OIL
104	SPARK PLUGS
107	THROTTLE OPERATION
108	IDLE SPEED
109	COOLANT
110	FRONT AND REAR SUSPENSION INSPECTION
111	SIDE STAND
112	BRAKE PAD WEAR
114	BRAKE LOCK OPERATION
115	BATTERY
117	FUSE REPLACEMENT

page

121	BULB REPLACEMENT
<b>128</b>	<b>CLEANING</b>
<b>132</b>	<b>STORAGE GUIDE</b>
132	STORAGE
134	REMOVAL FROM STORAGE
<b>135</b>	<b>SPECIFICATIONS</b>
<b>139</b>	<b>CATALYTIC CONVERTER</b>