


9. Remove the air cleaner (14) by removing the screw D (15).
10. Discard the air cleaner.
11. Install a new air cleaner.
Use the Honda genuine air cleaner or an equivalent air cleaner specified for your model. Using the wrong Honda air cleaner or a non-Honda air cleaner which is not of equivalent quality may cause premature engine wear or performance problems.
12. Install the removed parts in the reverse order of removal.

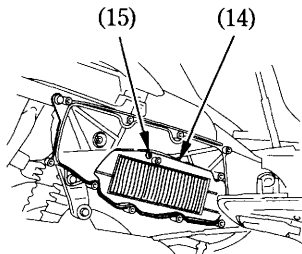

- (14) Air cleaner
(15) Screw D