

## IDLE SPEED


Refer to the Safety Precautions on page 86 .

The engine must be at normal operating temperature for accurate idle speed adjustment. 10 minutes of stop-and-go riding is sufficient.

1. Warm up the engine, place the scooter on its center stand.
2. Open the seat (page 56 ).
3. Adjust idle speed with the throttle stop screw (1).

Idle speed (In neutral):

$1,300 \pm 100 \text{ min}^{-1} (\text{rpm})$

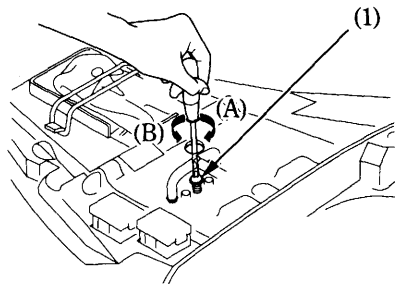

(1) Throttle stop screw

(A) Increase

(B) Decrease