



## Battery Removal

The battery (5) is in the battery box below the seat.

1. Open the seat (page 56 ).
2. Remove the screw (1) and battery cover (2).
3. Disconnect the negative (-) terminal lead (3) from the battery first, then disconnect the positive (+) terminal lead (4).
4. Pull out the battery (5) from the battery box.

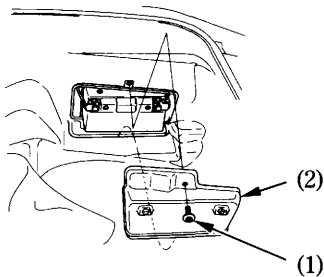

- (1) Screw  
(2) Battery cover

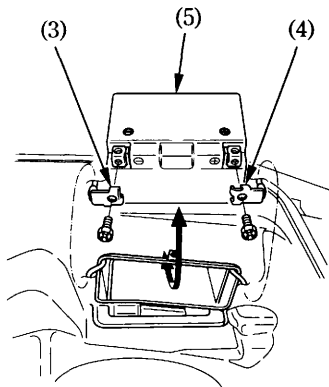

- (3) Negative (-) terminal lead  
(4) Positive (+) terminal lead  
(5) Battery