

ACCESSORY SOCKET

The accessory socket (1) is in the left compartment.


Open the cover (2) to gain access to the accessory socket.

Rated capacity is
12 watts (12 volt, 1 amps).

To prevent battery run down or weak battery, keep the engine running while drawing current from the socket.

Set the headlight in the LO beam. Battery run down or damage to the accessory socket cause result.

To prevent entry foreign matter, be sure to close the cover when the accessory socket is not used.

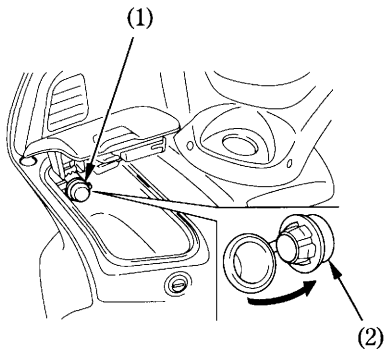

(1) Accessory socket

(2) Cover