


## AIR CLEANER

Refer to the Safety Precautions on page 86 .


The air cleaner should be serviced at regular intervals (page 88 ). Service more frequently when riding in unusually wet or dusty areas.

1. Remove the screws A (1) and rear cover (2).
2. Open the seat (page 56 ).

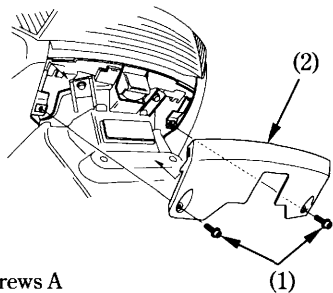

- (1) Screws A  
(2) Rear cover

3. Remove the screws B (3).

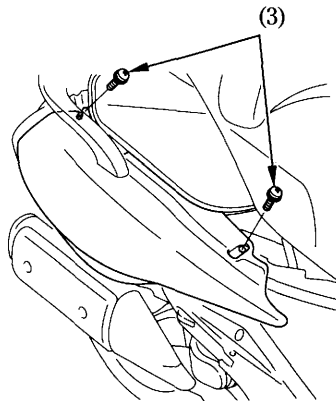

- (3) Screws B