

Ref.	Description	Function
5	Digital tripmeter	Shows mileage per trip.
6.	Gear position indicator	Indicates gear position.
7	Tachometer display	Shows engine rpm on display.
8~	Speedometer	Shows riding speed.
9	Fuel gauge	Shows approximate fuel supply available
10	Coolant temperature/suspension air pressure gauge	Shows coolant temperature (see page 70) or suspension air pressure (see page 44).
11	Right turn signal indicator (amber)	Flashes when the right turn signal operates.
12	Oil pressure warning light (red)	Lights when engine oil pressure is below the normal operating range. Should light when the ignition switch is ON and the engine is not running. Should go out when the engine starts, except for occasional flickering at or near idling speed when the engine is warm. CAUTION: Running the engine with insufficient oil pressure will cause serious engine damage.
13	Tail/stoptlight warning light	Lights when the tail/stoptlight bulb is burned out. Should light for a few seconds and go out when the ignition switch is turned ON.
14	Tripmeter reset button	Pressing the button resets the tripmeter to zero (0) (see page 82).
15	Tripmeter preset button	Pressing the button presets the digital tripmeter (5) (see page 82).
16	Speedometer (km/h MPH) select button (E type only)	Select speedometer readout in km/h or MPH (see page 74).
17	Tachometer display button	Turns the tachometer digital readout display (7) ON and OFF (see page 76).
18	Trip mode select button	Selects accumulating or decreasing mileage tripmeter mode (see page 80).