

Preset Buttons (7):

You can preset four AM stations and four FM stations.

AM and FM stations are preset with the memory switch (8). Press the memory switch and the memory indicator will show "ME" on.

The memory indicator "ME" will go out when you depress one of the four preset buttons 1 thru 4.

The memory is erased and the memory indicator "ME" goes out automatically if you do not depress the preset buttons (7) within 10 seconds after depressing the memory switch (8).

