

ITEM	FREQUENCY	WHICHEVER COMES FIRST							ODOMETER (NOTE 3)	REFER TO PAGE
	EVERY	1,000km (600mi)	6,400km (4,000mi)	12,800km (8,000mi)	19,200km (12,000mi)	25,600km (16,000mi)	32,000km (20,000mi)	38,400km (24,000mi)		
** DRIVE SHAFT JOINT		-	-	-	-	L	-	-	-	
FINALE DRIVE OIL		-	-	I	-	I	-	R	196	
BATTERY	MONTH	I	I	I	I	I	I	I	246	
BRAKE FLUID	MONTH 2 YEARS: *R	I	I	I	*R	I	I	*R	216	
BRAKE PAD WEAR		-	I	I	I	I	I	I	218	
BRAKE SYSTEM		I	-	I	-	I	-	I	218	
* BRAKE LIGHT SWITCH		I	-	I	-	I	-	I	260	
* HEADLIGHT ARM		I	-	I	-	I	-	I	-	
CLUTCH FLUID	MONTH: 1 2 YEARS: *R	I	I	I	*R	I	I	*R	210	
CLUTCH SYSTEM		I	-	I	-	I	-	I	210	
SIDE STAND		-	-	I	-	I	-	I	-	
* AIR PUMP ELEMENT		-	-	-	C	-	-	C	-	
* AIR DRIER		I	-	I	-	I	-	I	-	
* SUSPENSION		I	-	I	-	I	-	I	220	
* NUTS, BOLTS, FASTENERS		I	-	I	-	I	-	I	-	
** WHEELS		I	-	I	-	I	-	I	-	
** STEERING HEAD BEARING		I	-	I	-	I	-	I	-	

* Should be serviced by an authorized HONDA dealer, unless the owner has proper tools and service data and is mechanically qualified. Refer to the official HONDA shop manual.

** In the interest of safety, we recommended these items be serviced ONLY by an authorized HONDA dealer.

NOTE:

1. Service more frequently when riding in dusty areas.
2. Service more frequently when riding in rain or a full throttle.
3. For higher odometer reading, repeat at the frequency interval established here.
4. Lubricate with lithium-base multipurpose grease NLGI No. 2 (MOS, additive) every 8,000 miles (12,800 km) or whenever the rear wheel is removed.