


---

## SEAT

The seat can be removed by removing the bolts in each side.

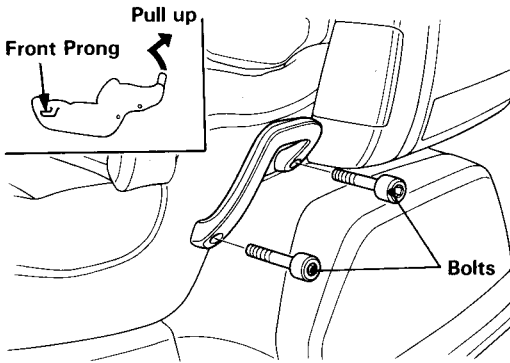

## ACC TERMINAL

The ACC terminal is in the fuse box (page 99) and provides 12V DC power for electrical accessories. A maximum of 60 Watts (5 amps) may be connected to the terminal. If equipped with accessories, check the battery frequently to determine the state of charge and examine it for possible sulfation. Higher current demands may blow the fuse or discharge the battery. Review the **LOADING AND ACCESSORIES WARNING** (page 6) before installing accessories. Connect accessory electrical leads securely, and keep them insulated, away from hot parts and sharp edges.

### CAUTION:

- *Do not exceed 5 amps for prolonged current demands.*

