

FEATURES (Not required for operation)

PROTECTION AGAINST WATER

The radio/cassette deck is designed to be weather proof. However, it is not designed to be sprayed directly with a hose.

CAUTION:

- When washing the motorcycle, avoid spraying high pressure water (typical in coin-operated car washes) near the audio system.

RADIO/CASSETTE COVER

To open the radio/cassette cover

Insert the ignition key and turn it clockwise to open the fuel filler compartment. Push the lock lever to remove the cover.

To lock the cover, insert the tabs in the grooves of the body and push down the cover. Make sure the cover is locked.

