

ESSENTIAL INDIVIDUAL COMPONENTS

RIGHT HANDLEBAR CONTROLS

Engine Stop Switch

The three position engine stop switch is next to the throttle grip. When the switch is in the ○ (RUN) position, the engine will operate. When the switch is in either ☒ (OFF)-position, the engine will not operate. This switch is intended primarily as a safety or emergency switch and should normally remain in the ○ (RUN) position.

(U only)

If your motorcycle is stopped with the ignition switch ON and the engine stop switch ☒ (OFF), the headlight and taillight will still be on, resulting in battery discharge.

Start/Reverse Button

The start/reverse button is below the engine stop switch. When the start/reverse button is pressed, the starter motor will crank the engine and the headlight will automatically go off, but the taillight will stay on. See pages 116 – 117 for “Starting Procedure.”

