 
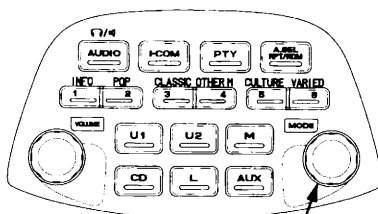 


FEATURES (Not required for operation)

Fader Control:

To balance the sound between the front and optional rear speakers — push the MODE knob three times, and “FADER” will appear on the display. Then, within five seconds, change the fader control. (The control range: F (front) and R (rear) each have 9 segments.)

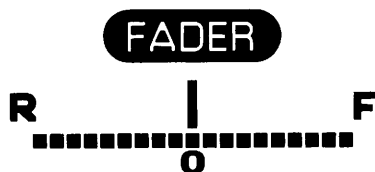

MODE knob


Muting:

To instantly lower the radio's volume so you may hear surrounding sounds more clearly — push the MUTE button.

The display will indicate “MUTE”.

To restore the original volume — push the MUTE button again to restore the original volume.

MUTE

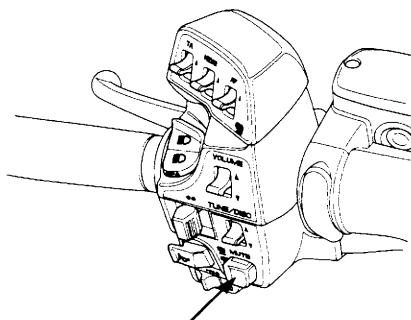

MUTE button