



PARTS LOCATION

Air Temperature Meter

Push the INFO button once to display the air temperature.

After 5 seconds, the previous display returns.

Temperature Display

Below -11°C	“— —” is displayed.
Between: -10°C — 50°C	Actual air temperature is indicated.
Above 50°C	The display will remain “50°C”.

The temperature sensor is located in the upper fairing. The temperature reading can be affected by heat reflecting from the road surface, engine heat, and the exhaust from surrounding traffic. This can cause an error in the temperature reading when your speed is under 30 km/h (19 mph).

23°C



↑
INFO button

