



---

## ENGINE OIL

### Engine Oil Level Check

Check engine oil level each day before operating the motorcycle.

#### To Check the Oil Level:

1. Remove the right engine side cover (page 139 ).
2. Start the engine and let it idle for 3–5 minutes.
3. Stop the engine and hold the motorcycle in an upright position on a firm, level ground.
4. After 2–3 minutes, remove the oil fill cap/dipstick, wipe it clean, and reinsert the oil fill cap/dipstick without screwing it in. Remove the oil fill cap/dipstick. The oil level should be between the upper and lower level marks on the oil fill cap/dipstick.
5. If required, add the specified oil up to the upper level mark. Do not overfill.
6. Reinstall the oil fill cap/dipstick, and the right engine side cover.

#### NOTICE

Running the engine with insufficient oil can cause serious engine damage.

Oil fill cap/dipstick

