



Tone Control

- The tone (Bass – Treble) is automatically adjusted in accordance with the vehicle speed.

Bass:

To select the Bass control, push the MODE knob/button until “BASS” is displayed (page 71). Then, within 5 seconds, change the bass control.

- To emphasize bass — turn the MODE knob/button clockwise.
- To reduce bass — turn the MODE knob/button counterclockwise.
(Bass control ranges from 6 down to –6.)

Treble:

To select the Treble control, push the MODE knob/button until “TREBLE” is displayed (page 71). Then, within 5 seconds, change the treble control.

- To emphasize treble — turn the MODE knob/button clockwise.
- To reduce treble — turn the MODE knob/button counterclockwise.
(Treble level ranges from 6 down to –6.)

