




FEATURES

(Not required for operation)

Fader Control

Adjusting the fader control changes the speaker volume — push the MODE knob/button until “FADER” is displayed (page 71). Then, within 5 seconds, change the fader control. (Setting the fader control to the F increases the speaker volume. Setting the fader control to the R decreases the speaker volume.)

MODE

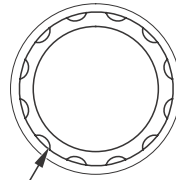

MODE knob/button

