



# FEATURES

## (Not required for operation)

### Weather Band (WB)

To listen to the Weather Band — push the WB button.

To cancel the Weather Band — push another button.

To select channels 1–6 — push the desired preset button.

To select channel 7 — push the TUNE/CH lever up or down until channel 7 is selected. (The TUNE/CH lever may be used to select any of the 7 channels. The lever must be used to select channel 7.)

