




FEATURES

(Not required for operation)

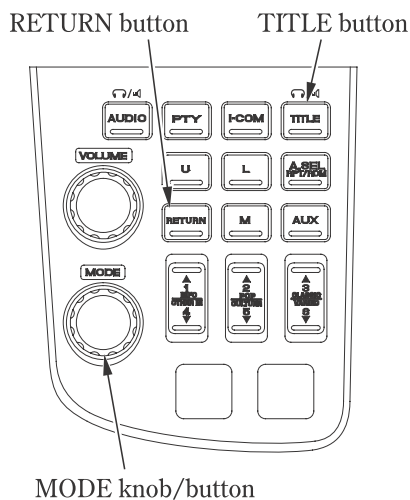

You can also change or select files and folders by using TUNE/CH lever while a USB flash drive is playing files.

Push the TUNE/CH lever up to change to the next file.

Push the TUNE/CH lever down to change to the previous file.

To change the folders, push and hold the TUNE/CH lever up or down.

